

# TRAILER HITCH MOUNTING INSTRUCTIONS



CATALOG NUMBER ..... 247306  
 APPLICATION ..... BMW 700 Series, Sedan,  
 HITCH CAPACITY ..... 2000 pounds gross trailer weight 200 pounds maximum tongue load OR the maximum load specified by the vehicle manufacturer; WHICHEVER IS LESS.

NOTES: A. This hitch features a removable ball mount. This hitch is not intended for use as a weight distributing hitch. Before towing, the hitch pin and retainer clip MUST be in place securing ball mount to receiver.  
 B. This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York and regulation V.E.S.C. V-5.

1. This hitch mounts to the trunk and tirewell structure. Temporarily remove spare tire from inside tirewell and lower plastic fascia panel attached to outside of tire well and bumper fascia. Fascia panel is removed by temporarily bending the corner of the exhaust shield on each side of car, allowing access behind fascia. Remove four fascia nuts, two on each side and carefully pull fascia off the studs. Carefully unclip four plastic clips attaching panel to bumper fascia.
2. Slide receiver assembly up behind bumper fascia, aligning holes in hitch with existing weldnuts in body ledge. Install fasteners ① and final tighten fasteners ① as specified on reverse of these instructions.
3. Carefully replace fascia panel between receiver assembly and tire well, over the studs on tire well. Reclip both fascia pieces together and replace the four fascia panel nuts remove in step one above. Bend exhaust shield back to original shape on both sides.
4. Position tail bracket assembly aligning holes for fasteners ②. Install fasteners ② as shown in diagram below.
5. Using tail bracket assembly as drill template, drill holes for fasteners ③. Install fasteners ③. Note: Install backing plates (#917) inside tire well as shown below.
6. Final tighten fasteners ② & ③ as specified on reverse of these instructions. Replace spare tire. Recheck all fasteners occasionally for tightness.

## FASTENERS:

- ① (4) 10 x 1.5 x 30mm screw
- (4) 7/16" lock washer
- ② (2) 7/16" x 1 1/2" carriage bolt
- (2) 7/16" lock washer
- (2) 7/16" hex nut
- ③ (4) 3/8" x 1 1/4" screw
- (4) 3/8" lock washer
- (4) 3/8" hex nut
- (2) Backing Plate (#917)

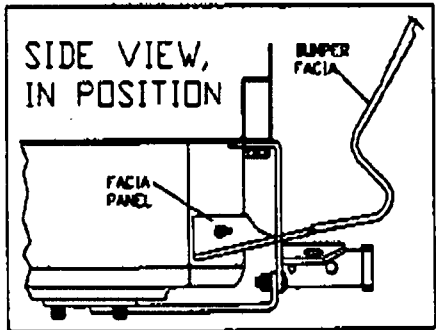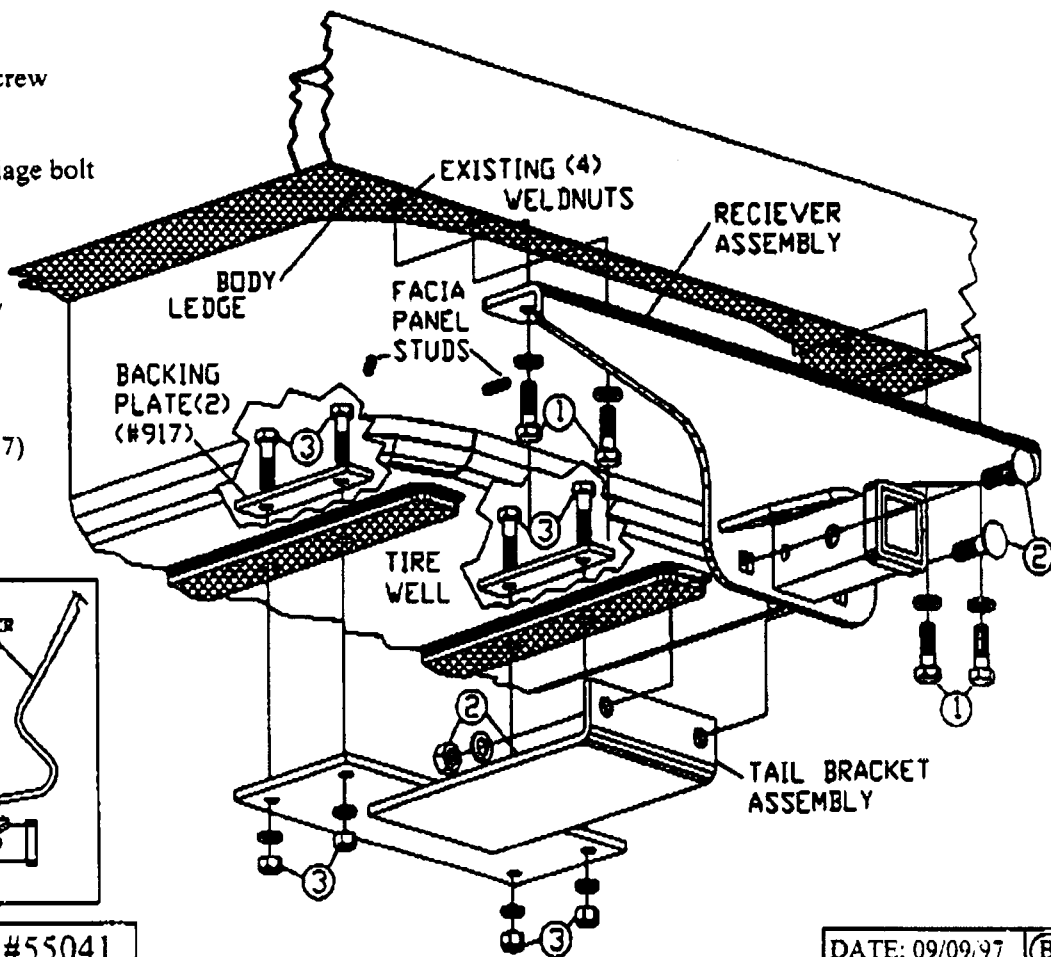

USE BALL MOUNT: #55041

DATE: 09/09/97 **B**